

CELLULAR 2.0 SIDE TRACK INSTALLATION INSTRUCTIONS

Tools Required:


- Pencil
- Tape Measure

Track Height:

- Max 96" high

Notes from the Manufacturer

- Do not remove adhesive liner from the side tracks until Step 3
- To properly install your side track and shade system, you must have a minimum of 1.25" of flat, clean surface to mount to
- **Energy Efficiency:** Combined with your new side tracks, your shade is designed to block the loss of heat through your windows while preserving the opportunity to enjoy the "free" energy available from direct sunlight. For maximum energy savings in most windows, the shade should be fully lowered to enhance insulation during non-daylight hours. In sunlit windows, a net solar energy gain may be achieved during the heating season by opening the shade during bright daylight hours to admit energy from sunlight into the interior room space.

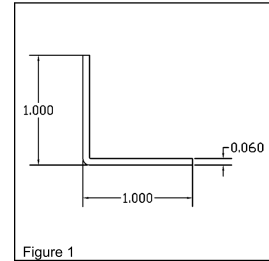


Step 1: Mount the Shade

1. Follow installation instructions specific to your shade type for bracket installation and operation. Ensure that the shade is centered in the window opening so that the tracks can fit on either side of the shade.

Step 2: Fitting the track

1. Lower the blind to rest on the window sill
2. One at a time, place each track (**without removing liner**) in the desired mounting location behind shade fabric, to ensure good fit.
3. Make sure the side track is as close to the edges of the shade fabric as possible without allowing the shade to rub against it. (If the shade is operated with a wand or chain loop, ensure the side track does not interfere with that mechanism.)
4. Mark your desired mounting location on the window frame with a pencil using the front edge of the track as a guide. Repeat for the other track.
5. Remove the shade.

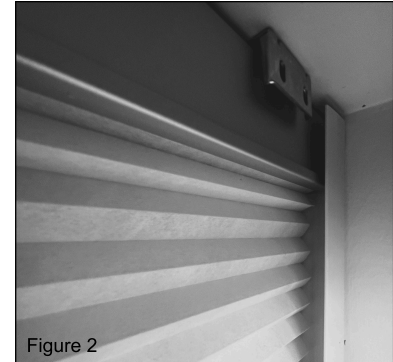

NOTE: These instructions are designed to accompany the installation instructions for your specific shade type.



Rev 1.2 08.25.2025 1

Step 3: Mounting the tracks

1. Remove the liner from the taped surface on one side track. Do not remove the liner from the second side track until the first track has been successfully installed.
2. Carefully line the front edge of the track up to the top and bottom marks without letting the tape touch the window frame
3. When properly lined up, press track against the window frame to attach.
4. Repeat for other track.
5. Snap the shade back into the brackets
6. Run the shade up and down to ensure proper operation

Note: It is important that both tracks are perfectly vertical, lined up with the fabric of the shade in order to ensure that the shade functions well



*If the track(s) needs to be trimmed:

Note: Side tracks are manufactured to be 1/8" shorter than the ordered height.

1. Measure the openings for your tracks as indicated above.
2. Using a marker or pencil, mark a piece of side track with your measurement and cut to height using a sharp pair of heavy scissors. Repeat with the second piece.

NOTE: These instructions are designed to accompany the installation instructions for your specific shade type.



Rev 1.2 08.25.2025 2