


CELLULAR 2.0 CORDLESS OUTSIDE MOUNT/DOOR MAGNET STRIKER PLATES INSTALLATION INSTRUCTIONS

Tools Required:

- Pencil
- Tape Measure
- Phillips screwdriver

Hardware Included:

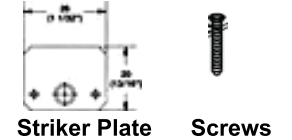

Shade with Magnets on the Back of the Rail

- Outside mount/door shades have a magnet and striker plate combination to ensure the bottom rail stays against the wall/door.

Step 1:

1. To install the strike plates, locate the magnets on the back of the bottom rail of your shade. They are installed with a 15 degree spacer to keep a vertical orientation, 1 ¼ inches from the end of either side (**Figure 1**).



Step 2:

1. With the supplied screw, **attach the striker plate (Figure 2)** to your wall/door so that it lines up with the magnet on the shade. The striker plate has a beveled hole for the screw on the top.

Tips & Tricks:

- You may have to pre-drill the hole, depending on your mounting surface. Additional tools will be needed in this case.
- Placing the striker plate on the magnet could help you find a more precise location for mounting the plate.

